

**SAVES
TIME!**

easyTrim™
by **NEWOOD®**

**SAVES
MONEY!**

Installation Instructions for Door/Hall Casing with Rosette/Flute/Plinth

To trim an opening,
you only need
(1) Header
(keystone optional),
(2) Side Mouldings

ROSETTE

FLUTE

PLINTH

Rosette, Flute and Plinth all in
one! No more struggling with
separate pieces, use our
three-in-one

easyTrim™

- ~ For new construction or remodeling
- ~ A low-cost way to beautify your home
- ~ Average installation in less than 20 minutes !

- Double-coated primed MDF
- Accepts oil or water based paints
- Use nails and/or construction adhesive
- Sand lightly before painting

MADE IN USA

manufactured by **NEWOOD®**

NEWOOD is a registered trademark of
NEWOOD Display Fixture Mfg. Company, Oregon

Patent Pending


INSTALLING **easyTrim™**

1. To determine where to cut the plinth on the **DOOR SIDE TRIM**, place the trim plinth side up next to the opening. From the top of the opening, add the height of the rosette plus 1/16" and cut the plinth at that measurement.
2. Install the door sides leaving a 1/4" margin (space) between the door opening and the edge of the trim.
3. Cut **FLUTED HEADER** by measuring the distance between the side pieces at the rosettes and cut.
4. Center header in between rosettes and install.
5. Utilize our optional **KEYSTONE** to retain the stop-flute on the header and/or to add decorative flair.


Putty nail holes and joints as needed, light sand, paint.

NOTE: When installing, If you do not use a nail gun we recommend that you pre-drill nail holes.

*DOOR SIDES
(STEP 1)* *DOOR SIDES
(STEP 2)*

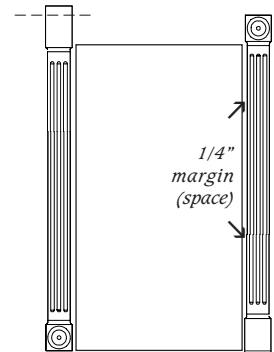

*FLUTED
HEADER
(STEP 3)* *FLUTED
HEADER
(STEP 4)*

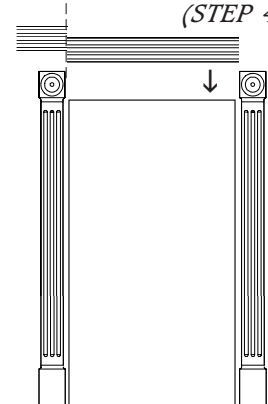

*STOP-FLUTED HEADER
(STEPS 5)*

