



**SAVES
TIME!**

easyTrim™
by **NEWOOD®**

**SAVES
MONEY!**

Installation Instructions for Window Casing with Rosette/Flute/Plinth

To trim an opening, you only need
(1) Header (keystone optional), (2) Side Mouldings, (1) Sill

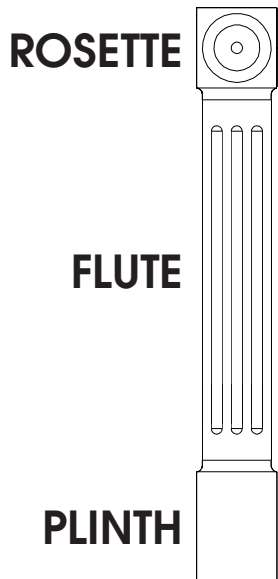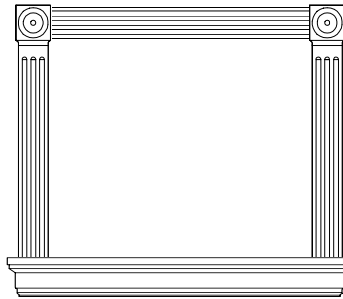

Rosette, Flute and Plinth all in
one! No more struggling with
separate pieces, use our
three-in-one

easyTrim™

- ~ For new construction or remodeling
- ~ A low-cost way to beautify your home
- ~ Average installation in less than 20 minutes !

- Double-coated primed MDF
- Accepts oil or water based paints
- Use nails and/or construction adhesive
- Sand lightly before painting

MADE IN USA

manufactured by **NEWOOD®**

NEWOOD is a registered trademark of
NEWOOD Display Fixture Mfg. Company, Oregon

Patent Pending


INSTALLING *easyTrim*TM

1. Install the **WINDOW SILL EXTENSION** first by measuring the window opening, plus the widths of each side window side trim plus the desired amount of sill overhang you want. Cut the sill to that length. Center under window opening and install.
2. Determine where to cut the **WINDOW SIDE TRIM** by turning the window side piece upside down (rosette resting on sill). At the top window opening, add the height of the rosette plus 1/6" and cut side piece at that measurement.
3. Install the window sides leaving a 1/4" margin (space) between the window opening and the edge of the trim.
4. Cut **FLUTED HEADER** by measuring the distance between the side pieces at the rosettes and cut.
5. Center header in between rosettes and install.
6. Utilize our optional **KEYSTONE** to retain the stop flute on the header and/or to add decorative flair.


Putty nail holes and joints as needed, light sand, paint.

NOTE: When installing, If you do not use a nail gun we recommend that you pre-drill nail holes.


*WINDOW SILL EXTENSION
(STEP 1)*

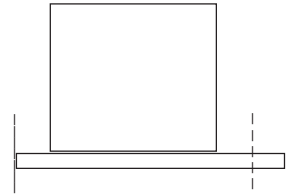

WINDOW SIDE TRIM (STEP 2)

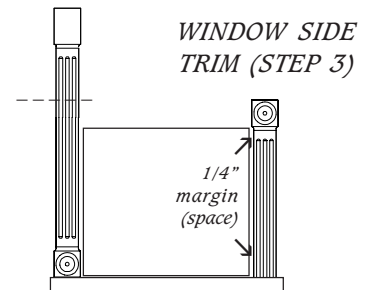

FLUTED HEADER (STEP 4) *FLUTED HEADER (STEP 5)*

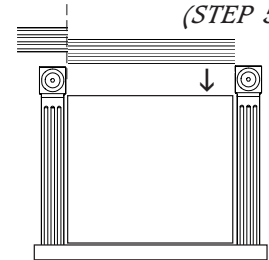

*STOP-FLUTED HEADER
(STEP 6)*

